





INSTALLATION INSTRUCTIONS: JEEP WRANGLER JL/JLU MISSION DOORS- DRAFT


 Parts List	
1	Set, Doors (Front or Rear)
1	Installation Hardware Bag
1	Installation Instructions

Difficulty Level : Easy




Product Support

 1-888-531-7183

 Info@combat-offroad.com

PRODUCT IMAGE

 Tool List	
13 mm Wrench	10 mm Wrench
5 mm Allen Key	3 mm Allen Key
T50 Torx Bit	



NOTES AND MAINTENANCE

Before you begin installation, read all instructions thoroughly.

Proper tools will improve the quality of installation and reduce the time required.

For black finishes, mild soap may be used to clean the product.

Periodic inspections should be performed to ensure all mounting hardware remains tight.

Mild automotive detergent may be used to clean the product. Do not use dish detergent, abrasive cleaners, abrasive pads, wire brushes or other similar products that may damage the finish.

FEEDBACK

COMBAT OFF ROAD industry leading warranty. Register your purchase by visiting: www.combat-offroad.com/registration

Be social, tag us on your install or out on the trail enjoying, use: #combatoffroad

STEP 1 - Front Door Installation

Install the mirror onto the tube door with the supplied using bolts and nuts using a M3 Allen bit or key with a 10 mm wrench in 3 locations, tighten securely once positioned.

Install the hinges by lining up the holes in the hinges with the holes in the doors. Line up the bracket for the retaining strap on the back side of the lower door mount. Use the supplied allen head bolts and flange nuts and loosely tighten by hand.

IMPORTANT - Do not fully tighten the hinges at this time as you will need to align the door on the vehicle.

Repeat process for opposite side of vehicle.



Front Side



Rear Side

STEP 2 - Rear Door Installation (As needed)


Install the hinges by lining up the holes in the hinges with the holes in the doors. Line up the bracket for the retaining strap on the back side, it uses its own set of holes. Use the supplied allen head bolts and flange nuts and loosely tighten by hand.

IMPORTANT - Do not fully tighten at this time.

Repeat process for opposite side of vehicle.



Front Side

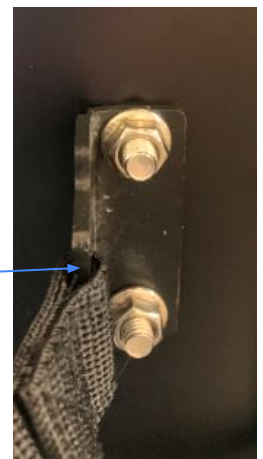

Rear Side



STEP 3 - Removal of Factory Doors

Using a T50 torx key, remove the securing nuts from the bottom side of the hinges at each door, retain for future use as desired.


Open door then, open access panel (cover plate at end of fabric strap).

Disconnect electrical connection by pulling out locking tab and separating harness connectors.

Disconnect retaining strap by removing the bolt using the torx bit.

Lift off factory door and store appropriately.

NOTE: Doors are heavy, use caution when lifting off vehicle!!

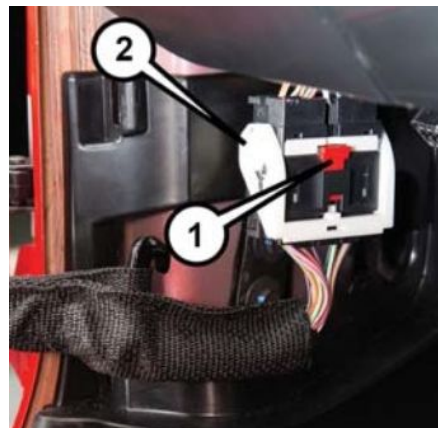



STEP 4 - Door Alignment Step

Lower each tube door onto the vehicle hinges.

Close the door ensuring it latches on the striker mounted on the vehicle body.

Lift the rear of the door slightly to align the center of the opening with the latch and tighten the hardware at the hinges using a 5 mm Allen key and 13 mm wrench.

Open and close the door to ensure the alignment is centered on the latch.

Once the above steps are completed, the door latch can be adjusted by moving the latch in and out on the tube door frame by loosening the mounting hardware and adjusting the position as appropriate for your vehicle to ensure a snug fit. This may take a few attempts to get it perfect but is worth the effort.

NOTE: Be sure to tighten all hardware securely once you are satisfied with the fit and function.

Adjust this hardware position for rattle free installation.

