
 <b>Parts List</b>	
QTY	
1	Set, Tail Lights


**Difficulty Level: Easy**

**Product Support**


**1-888-531-7183**


**info@combat-offroad.com**

 <b>Tool List</b>	
	8mm Socket Ratchet
	10mm Socket Ratchet

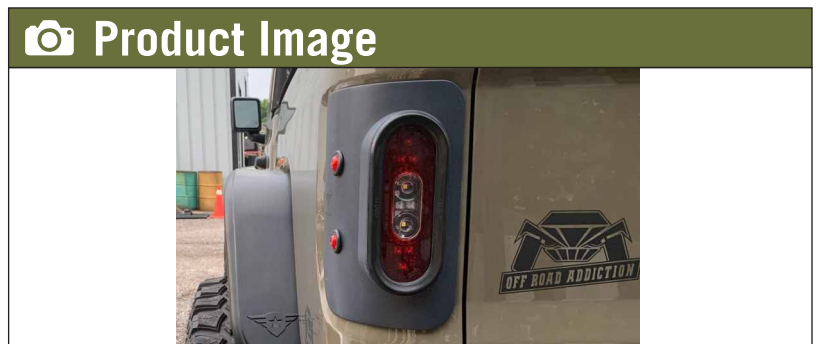

## Notes and Maintenance



**\*IMPORTANT NOTE\*** The resistor will get hot - do not bundle the resistor up with the rest of the wiring harness. During installation, ensure the resistor is away from the other wiring - some customers use high-heat double-sided tape, metal zip ties or other high-temp fasteners (machine screws or nuts/bolts). Failure to keep the resistor away can result in melting of the wiring harness or other damage making the lights inoperable. Damage caused by improperly located resistors is not covered by warranty.

Before you begin installation, read all instructions thoroughly.

Proper tools will improve the quality of installation and reduce the time required.

For black finishes, mild soap may be used to clean the product.

Periodic inspections should be performed to ensure all mounting hardware remains tight.

Mild automotive detergent may be used to clean the product. Do not use dish detergent, abrasive cleaners, abrasive pads, wire brushes or other similar products that may damage the finish.

## Feedback

COMBAT OFF ROAD industry leading warranty. Register your purchase by visiting:  
[www.combat-offroad.com/registration](http://www.combat-offroad.com/registration)

Be social, tag us on your install or out on the trail enjoying, use: #combatoffroad



# TAIL GUNNER ARMOR TAIL LIGHT KIT

## Installation Instructions JEEP WRANGLER JT

### Step 1

Drop down the tailgate to access the mounting hardware for the factory tail lights.

Using an 8 mm socket and ratchet, remove the hardware and retain for future use.

Pull out the tail light from the mount towards the rear of the vehicle.

Release the electrical connection by sliding the red locking tab back, depressing the black tab down and pulling the connection apart.



### Step 2

Remove the ball studs from the existing lights and install them in the same location on the new lights using a 10 mm socket and ratchet.



### Step 3

Connect the wiring harness by pushing the connectors together until the black tab clicks, then lock it by sliding the red tab down.

Align the ball studs with the factory mounting locations and push the tail light into position.

Reinstall the factory mounting screws and tighten once the bracket is aligned with the body line using the 8 mm socket and ratchet.

Repeat the process for opposite side of the vehicle.



**DISCLAIMER:** The Combat Off Road LED tail light kit (Tail Gunner Tail Light Kit) is not designed or recommended to be used or installed on any Jeep JL or JT Gladiator that are equipped with the blind spot monitoring system. If you choose to disable the blind spot monitoring system with a tuner, programmer or any other computer interface device (i.e. Tazer from Z Automotive, Superchips Flashcal+, etc), Combat Off Road does not accept any responsibility or liability for the compromise of the safety features or any injury, damages, claims, expenses, or responsibility that may be caused or alleged to be caused, in whole or in part, by the removal of those features. Combat Off Road recommends the Tail Gunner Tail Light Kit be used for off road use only.

**WARNING:** Cancer and Reproductive Harm - [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov)