





INSTALLATION INSTRUCTIONS: JEEP WRANGLER JT BATTLE READY ALUMINUM INNER FENDER KIT, REAR - DRAFT


 Parts List	
1	Pair Rear Inner Fender Liners
1	Installation Hardware Bag
1	Installation Instructions

Difficulty Level : Medium




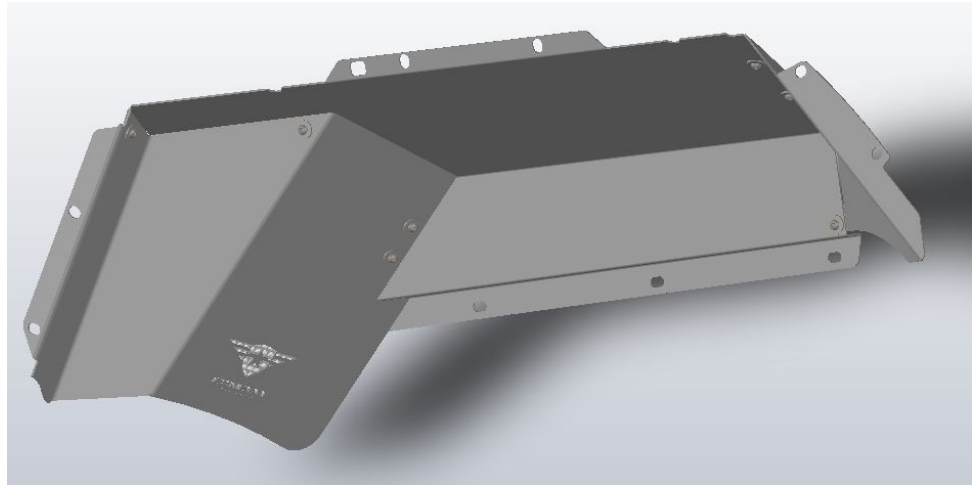
Product Support

 1-888-531-7183

 Info@combat-offroad.com

PRODUCT IMAGE

 Tool List	
10 mm Wrench	4 mm Allen Key
8 mm Socket	Ratchet
Drill	1/4" Drill Bit
Trim Removal Tool	



NOTES AND MAINTENANCE

Before you begin installation, read all instructions thoroughly.

Proper tools will improve the quality of installation and reduce the time required.

For black finishes, mild soap may be used to clean the product.

Periodic inspections should be performed to ensure all mounting hardware remains tight.

Mild automotive detergent may be used to clean the product. Do not use dish detergent, abrasive cleaners, abrasive pads, wire brushes or other similar products that may damage the finish.

FEEDBACK

COMBAT OFF ROAD industry leading warranty. Register your purchase by visiting: www.combat-offroad.com/registration

Be social, tag us on your install or out on the trail enjoying, use: #combatoffroad

DISCLAIMER

Jeep®, Wrangler, Rubicon, and the Jeep grille design are registered trademarks of FCA (Fiat Chrysler Automobiles). Combat Off Road has no affiliation with FCA. The terms Jeep®, Wrangler, MOPAR®, & Rubicon are used for identification purposes only.

STEP 1


Remove the existing inner fender liner

Using a suitable trim removal tool, pry out the securing plastic pins in 3 locations around the fender (Figure 1)

Remove the mounting bolts on the inside edge using an 8 mm wrench or socket in 3 locations at the lower inside edge along the box (Figure 2)

Using the drill and ¼" bit, drill out the center of the plastic rivets around the outside perimeter that joins the inner fender to the outer flare. Remove inner fender liner (Figure 3)

Repeat for opposite side of vehicle



Factory Inner Fender Image

Figure 1



Figure 2



Figure 3



STEP 2

Assemble the inner fender 3 pieces together on a suitable work surface.

Use the supplied bolts, washers and nuts at each location and tighten with the 4 mm Allen key and 10 mm wrench.

Repeat for opposite side of vehicle.



Passenger Side Assembly



Driver Side Assembly



STEP 4

Assemble the inner fender onto the vehicle

Align the inner fender with the mounting holes and the existing outer fender retaining clips

Use the supplied bolts and washers at the 2 upper and 3 lower mounting locations where the speed clips were installed in the previous steps. Tighten with the 4 mm Allen key.

Passenger Side Completed Image

Passenger Side Completed



Driver Side Completed